Getting started - Dryer

AWARNING

To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INFORMATION before operating this appliance.

AWARNING



- Fire Hazard

- Keep flammable materials and vapors, such as gasoline, away from dryer.
- **DO NOT** dry anything that has ever had anything flammable on it (even after washing).
- No washer can completely remove oil.

- DO NOT dry anything that has ever had any type of oil on it (including cooking oils).
- Items containing foam, rubber, or plastic must be dried on a clothesline.
- Failure to do so can result in death, explosion, or fire.

For models without E-Dry:

Step 1



NOTE: Dryer will not

start with door open.

· Close door.





Step 3


Throughout this manual, features and appearance may vary from your model.

Loosely add items.

 Select a dry cycle.

 Press the Start button.



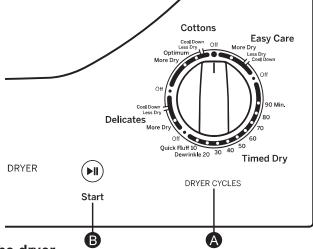

IMPORTANT: Clean the lint filter each time you use the dryer.

NOTE: This appliance is designed so that the washer and dryer can be operated at the same time.

A Dryer Cycles

Cottons	For cottons and most linens. For most loads, select Optimum dry.
Easy Care	For wrinkle-free, permanent press and delicate items, and knits.
Delicates	For delicate items, special-care fabrics and knits.
Timed Dry	Set the Cycle Selector at the desired drying time.
30 Min. (Damp Dry)	For leaving items partially damp.
Dewrinkle (20 Min.)	For removing wrinkles from items that are clean and dry or that are very lightly damp.
Quick Fluff (10 Min.)	For freshening or fluffing up already dry clothing, fabrics, linens and pillows. Provides 10 minutes of no heat tumbling.

Fabric Care/Temperature

Cottons (High Heat)	For regular to heavy cottons.
Easy Care (Med Heat)	For synthetics, blends, delicates and items labeled permanent press.
Delicates (Low Heat)	For delicates, synthetics and items labeled tumble dry low.
Quick Fluff (No Heat)	For fluffing items without heat. Use the Timed Dry cycle.

Automatic cycles determine fabric dryness and provide automatic sensored drying. The timer does not rotate during the cycle until the thermostats sense that the clothes are dry, then the timer rotates automatically to Off. Select Less Dry if you want your clothes slightly damp at the end of the drying cycle. Select More Dry if you want them to feel drier. Timed Dry cycle runs for a selected time.

Timed Cycle

Timed Dry	For manual drying.

B Start - Close the dryer door. Press Start. Opening the door during operation will stop the dryer. To restart the dryer, close the door and select **Start** to complete the cycle. A chime will sound at the end of the dry cycle.

14 49-90581-3

Getting started - Dryer

 
For models with E-Dry:

Step 1





Step 2





Step 3





· Loosely add items. · Close door.

· Select a dry cvcle.


 Select if using Time Dry.

Temperature

NOTE: Dryer will not start with door open.

IMPORTANT: Clean the lint filter each time you use the dryer.

NOTE: This appliance is designed so that the washer and dryer can be operated at the same time.

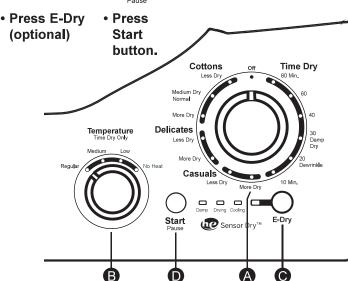

A Dryer Cycles

Cottons	For cottons and most linens. For most loads, select Medium Dry/Normal .
Casuals	For wrinkle-free, permanent press and delicate items, and knits.
Delicates	For delicate items, special-care fabrics and knits.
Time Dry	Set the Cycle Selector at the desired drying time.
30 Min. (Damp Dry)	For leaving items partially damp.
20 Min. (Dewrinkle)	For removing wrinkles from items that are clean and dry or that are very lightly damp.
10 Min. (Quick Fluff)	For freshening or fluffing up already dry clothing, fabrics, linens and pillows. Provides 10 minutes of no heat tumbling.

Automatic cycles determine fabric dryness and provide automatic sensored drying. The timer does not rotate during the cycle until the thermostats sense that the clothes are dry, then the timer rotates automatically to Off. Select Less Dry if you want your clothes slightly damp at the end of the drying cycle.

Select More Dry if you want them to feel drier. Time Dry cycle runs for a selected time.

Time Cycle

Time Dry	For manual drying.
----------	--------------------

Use **Time Dry** with **Temperature** set to **Medium** to dry bulky items such as bedspreads and comforters.

Temperature (Fabric Care) - For use with Time Dry settings only

Regular (Cottons)	For regular to heavy cottons.
Medium (Casuals)	For synthetics, blends, delicates and items labeled permanent press.
Low (Delicates)	For delicates, synthetics and items labeled tumble dry low.
No Heat (Quick Fluff)	For fluffing items without heat. Use the Timed Dry cycle.

Temperature is automatically set according to fabric type and is not adjustable: Regular heat = Cottons; Medium heat = Casuals; Low heat = Delicates.

Reduces total energy consumption on automatic cycles by adjusting certain heat settings.

The E-Dry selection can be used with Cottons only. NOTE: Cycle time will change when E-Dry is selected. Energy Star® models are tested on Cottons cycle with default settings to determine energy use rating of this dryer. The E-Dry option will default only for Cottons at Medium Dry/Normal and More Dry settings. Temperature settings on Regular are specifically designed for this cycle to reduce energy consumption. For optimal energy savings, turn **E-Dry** on. For optimal drying times, turn **E-Dry** off. Energy savings will vary across loads.

D Start - Close the dryer door. Press Start. Opening the door during operation will stop the dryer. To restart the dryer, close the door and select **Start** to complete the cycle. A chime will sound at the end of the dry cycle.

Getting started - Dryer

WiFi Connect (For customers in the United States only)

Your laundry center's dryer is **GE Appliances WiFi Connect** compatible using the optional **GE Appliances ConnectPlus** module.

To connect this appliance to the internet you will need to purchase a **GE Appliances ConnectPlus** and attach the module to your appliance through the communication port in the appliance. The **GE Appliances ConnectPlus** will allow your appliance to communicate with your smartphone for remote appliance monitoring and notifications.

Please visit www.GEAppliances.com/connect to learn more about connected appliance features and to learn what connected appliance app's will work with your smartphone.

WiFi Connectivity: For assistance with the appliance or the **ConnectPlus** network connectivity, please call GE Appliances at **800.GE.CARES**.

Visit your local authorized GE Appliances Parts distributor or order by phone at **800.661.1616** during normal business hours.

Part Number Accessory

PBX10W00Y0 WiFi ConnectPlus module

 
16

17

Venting - Dryer

Venting the Dryer

For the best drying performance, the dryer needs to be properly vented. The dryer will use more energy and run longer if it is not vented to the specifications below. Carefully follow the details on Exhausting in the Installation Instructions.





Incorrect Venting



AWARNING /// - Fire Hazard

This dryer MUST be exhausted to the outdoors.

Use only 4" rigid metal ducting for the home exhaust duct.

Use only 4" rigid metal or UL-listed dryer transition duct to connect the dryer to the home exhaust.

DO NOT use a plastic vent.

DO NOT exhaust into a chimney, kitchen exhaust, gas vent, wall, ceiling, attic, crawl space, or concealed space of a building.

DO NOT install a screen in or over the exhaust duct.

DO NOT install a booster fan in the exhaust duct.

DO NOT use duct longer than specified in the exhaust length table.

Failure to follow these instructions can result in death or fire.

Ductwork that runs through an unheated area or that is near air conditioning should be insulated to reduce condensation and lint build-up.

Care and Cleaning - Dryer

The Exterior: Wipe or dust any spills or washing compounds with a damp cloth. Dryer control panel and finishes may be damaged by some laundry pretreatment soil and stain remover products. Apply these products away from the dryer. The fabric may then be washed and dried normally. Damage to your dryer caused by these products is not covered by your warranty.

The Lint Filter: Clean the lint filter before each use. Slide out the grid that covers the filter. Run your fingers across the filter. A waxy buildup may form on the lint filter from using dryer-added fabric softener sheets. To remove this buildup, wash the lint screen in warm, soapy water. Dry thoroughly and replace. Do not operate the dryer without the lint filter and grid in place. Have a qualified technician vacuum the lint from the dryer once a year.

Model: GUD24 Model: GUD27 & GUV27





Dryer Interior and Duct: The interior of the appliance and exhaust duct should be cleaned once a year by qualified service personnel.

The Exhaust Duct: Inspect and clean the exhaust ducting at least once a year to prevent clogging. A partially clogged exhaust can lengthen the drying time.

Follow these steps:

- 1. Turn off electrical supply by disconnecting the plug from the wall socket.
- 2. Disconnect the duct from the dryer.
- 3. Vacuum the duct with the hose attachment and reconnect the duct.

The Exhaust Hood: Check with a mirror that the inside flaps of the hood move freely when operating. Make sure that there is no wildlife (birds, insects, etc.) nesting inside the duct or hood.

49-90581-3